

This product allows the Petzl Croll to be used in conjunction with the Petzl C64 Chester chest harness and Petzl industrial sit harnesses C38, C79, C91 & C91.

This product can also be used with the C71 Navaho Complet full body harness – see addendum.

Please read the following information carefully before use.

Inspection and important points:

Before each use, check the webbing for wear/abrasion of the Chester and the **Croll Strap**.

The Chester **MUST** be attached to the sit harness as shown in the Petzl instructions that accompany the Chester. **NEVER** use the Chester without it being attached correctly to the sit harness.

Check that the Croll, Chester and any lanyards attached to the Chester operate correctly.

The **Croll Strap** must **NEVER** be used to directly attach the Chester to the sit harness. The **Croll Strap** is **ONLY** designed to hold the Croll upright.

Instructions for use:

Use a PPE Maillon Rapide (10 mm semi circular or 10 mm delta) to attach the Croll to the sit harness, positioned as shown. It is preferable to have the Maillon Rapide sitting behind the main attachment point of the sit harness. Check the Maillon Rapide is securely fastened (refer to manufacturer's instructions for use).

Place the tail of the **Croll Strap** through the narrow gap at the sternal attachment point of the Chester so that the **Croll Strap** buckle is closest to the body.

Pass the tail of the webbing through the sternal attachment and through the top hole of the Croll from the front.


Take the tail up and pass it back through the sternal attachment and through the narrow gap of the Chester and feed into the buckle.

Adjust the strap to length as required.

The chest strap must then be doubled back through the buckle to prevent any slippage.

Addendum for C71 Navaho Complet

The **Croll Strap** can be used with this harness **but** the Croll **must not be attached to the karabiner supplied with the harness**. Connection to the Croll must only be made with a PPE Maillon positioned as shown in the diagram.

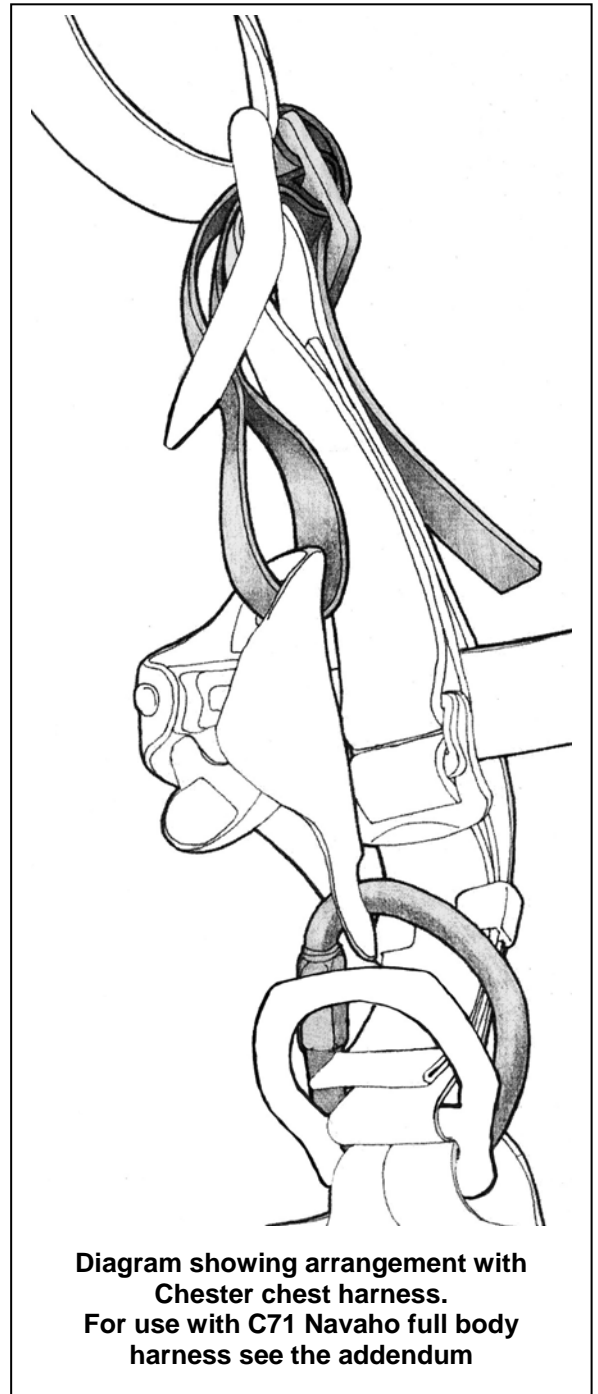

Document No.	IL00001	
Issue No.	1	
Revision No.	2	
Issued by:	G Lyon	
Approved by:	J Capper	
Date.	22/03/05	Page 1 of 2

Lyon Equipment Ltd
 Dent
 Sedbergh
 Cumbria
 LA10 5QL
 Tel: +44 (0) 15396 25493
 Fax: +44 (0) 15396 25454
 Email: work.rescue@lyon.co.uk



Instructions for the 'Croll Strap' Lyon product code LS16

General Information

Important notice: Specific training is essential before use

Read this notice carefully, it gives instructions for use of this product. Only techniques shown in the instructions for the Croll and Chester and not crossed out are authorised. All other uses are excluded: danger of death. Many other types of misuse exist and it is impossible to enumerate or even imagine all of them. In case of doubt or difficulty in understanding, contact Lyon Equipment. Activities at height are dangerous which may lead to severe injury or even death. Gaining an adequate apprenticeship in appropriate techniques and methods of protection is your own responsibility. You assume all risks and responsibilities for all damage, injury or death which may occur during or following incorrect use of our or Petzl products in any manner whatsoever. If you are not able, or not in a position to assume this responsibility or to take this risk, do not use this equipment.

Use

Even though this equipment is not Personal Protective Equipment this product must only be used by competent and responsible persons, or those placed under the direct and visual control of a competent and responsible person. Check that this product is compatible with other components of your equipment.

Checking = safety

Do not hesitate to scrap any product showing signs of wear which may affect its strength or restrict its operation. For your safety we advise you to adopt a 3-level checking schedule:

- Before and after each use it is necessary to check the condition of the product
- During use, it is important to regularly monitor the condition of the product and of its connections to the other elements of the system
- Periodically, a more thorough inspection must be carried out by a competent inspector

Lyon Equipment and Petzl are not responsible for the consequences direct, indirect or accidental, or any other type of damage befalling or resulting from the use of their products.



Document No.	IL00001	
Issue No.	1	
Revision No.	2	
Issued by:	G Lyon	
Approved by:	J Capper	
Date.	22/03/05	Page 2 of 2

Lyon Equipment Ltd
Dent
Sedbergh
Cumbria
LA10 5QL
Tel: +44 (0) 15396 25493
Fax: +44 (0) 15396 25454
Email: work.rescue@lyon.co.uk